


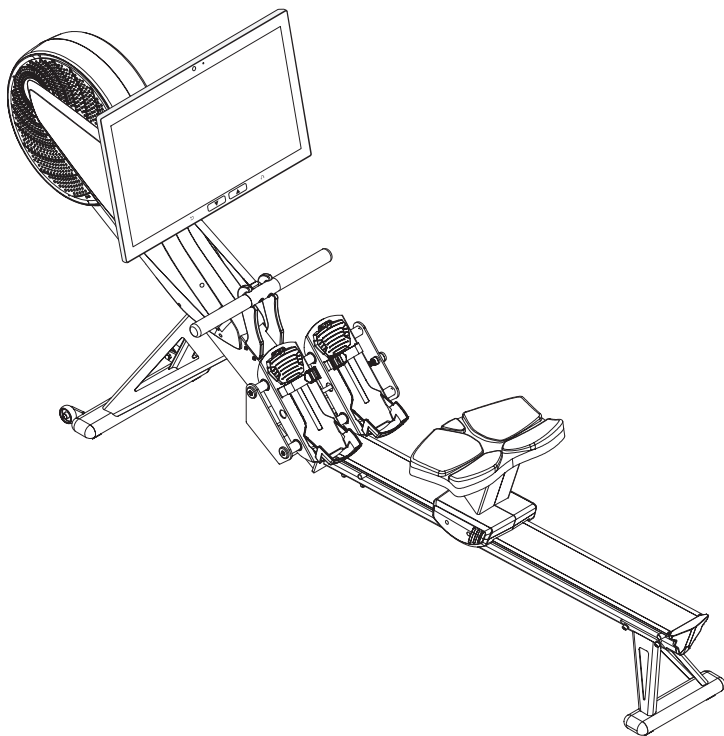

Tough Series Rower



Service Manual

CONTENTS

Parts	Reference step
Shroud	1→2
Tension cable	1→2→4
Motor	1→2→4→9
Sensor	1→2→7
Magnetic wheel w/fan	1→2→4→5
Belt	1→2→4→5→6
Return spring assembly	1→2→3→4→5→6→7→8
Slider assembly (w/ PU wheel)	11→12
Cable	1→2→10



INSTRUCTIONS

- Step 1
Remove shroud-1

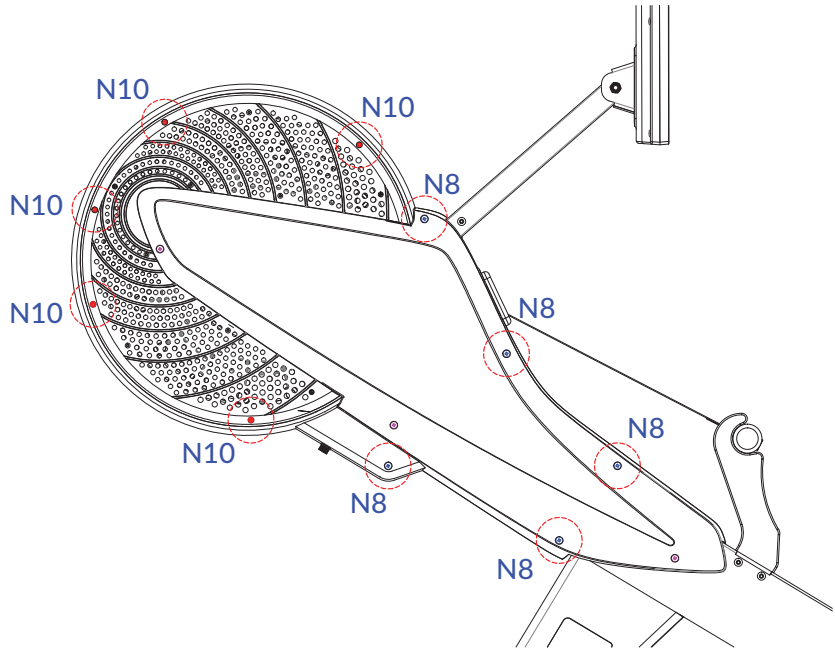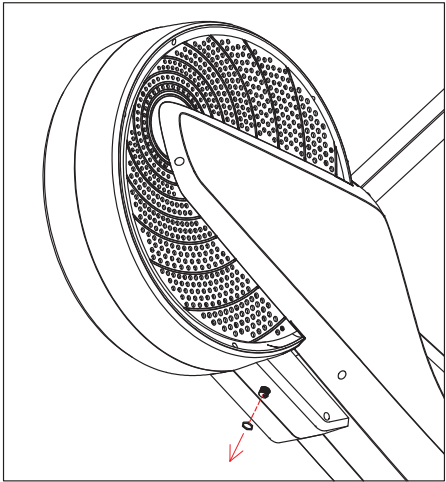


INSTRUCTIONS

- Step 2
Remove shroud-2

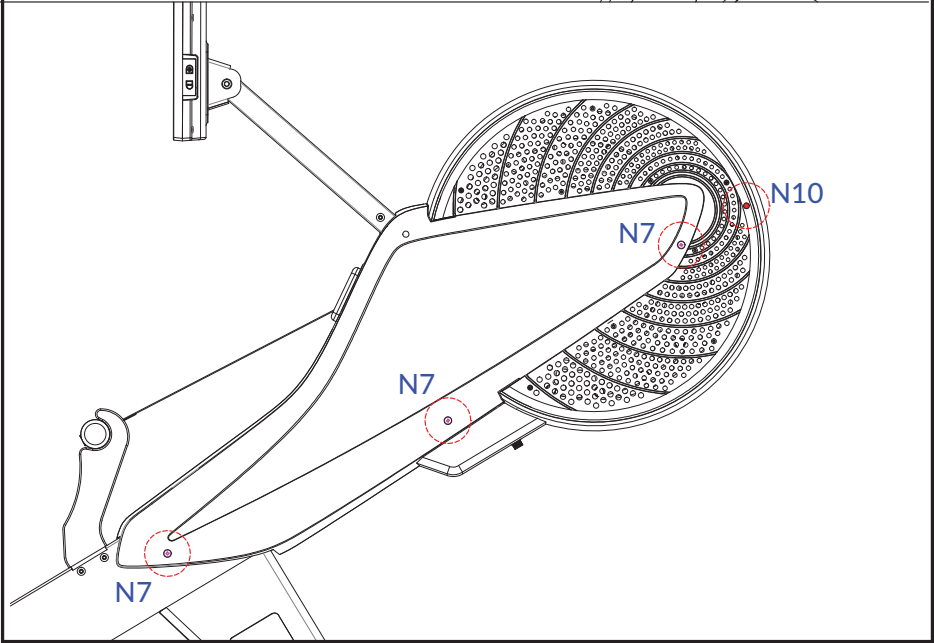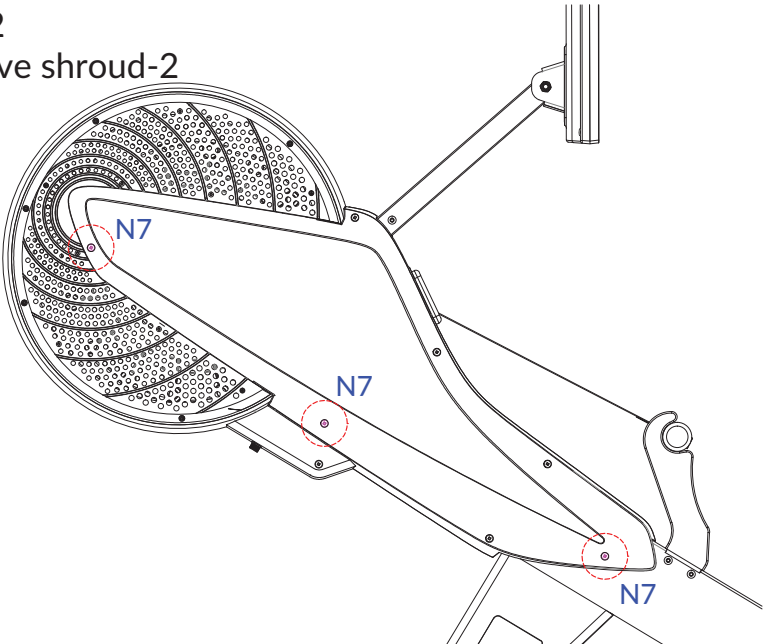


INSTRUCTIONS

- Step 3
Remove handlebar

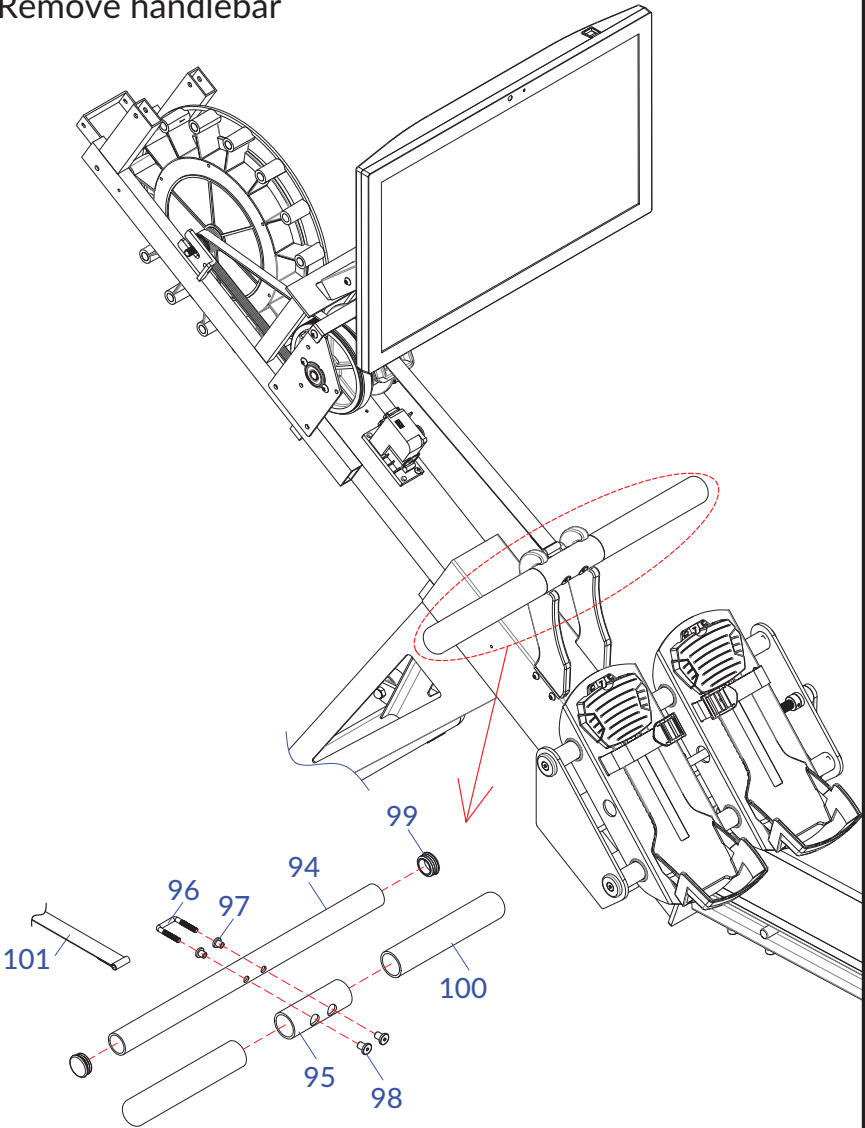


INSTRUCTIONS

- Step 4
Remove tension cable

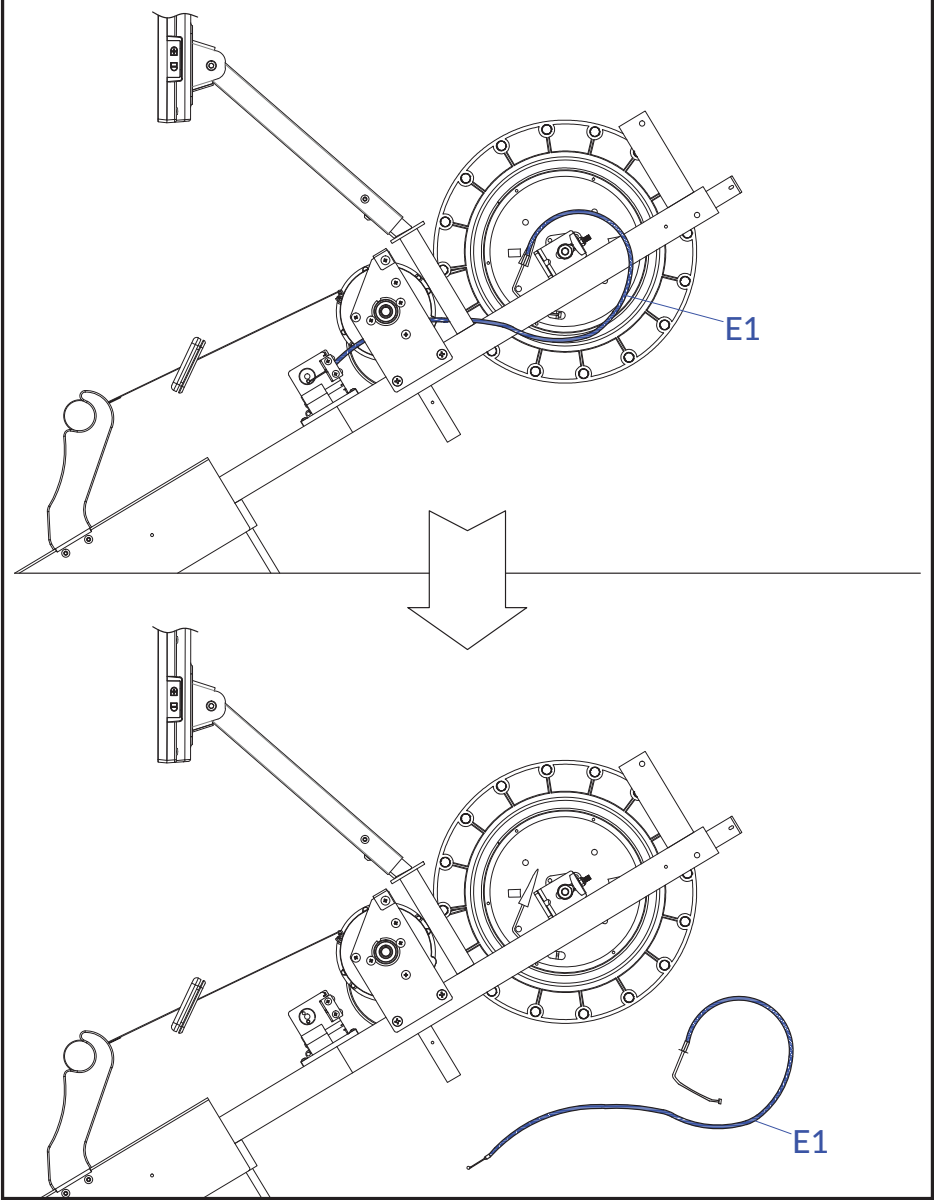


INSTRUCTIONS

- Step 5.1
Remove magnetic wheel w/fan


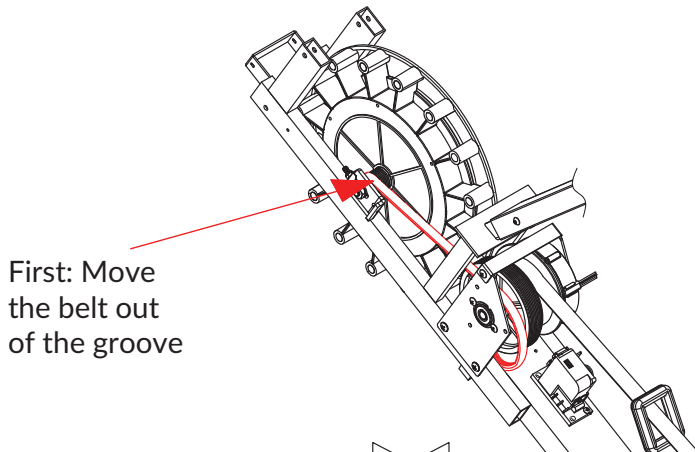


- Step 5.2

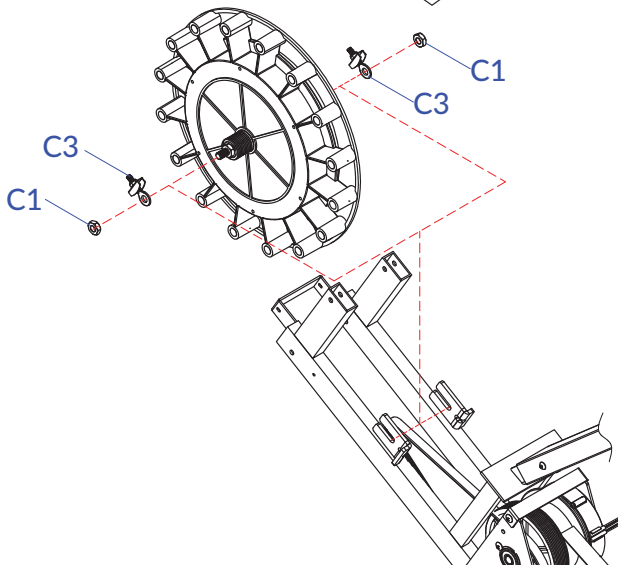


INSTRUCTIONS

- Step 6.1
Remove belt

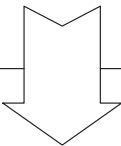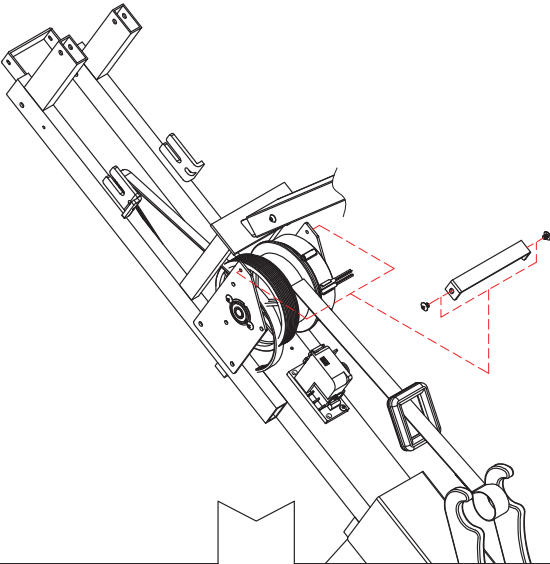


- Step 6.2
Remove belt

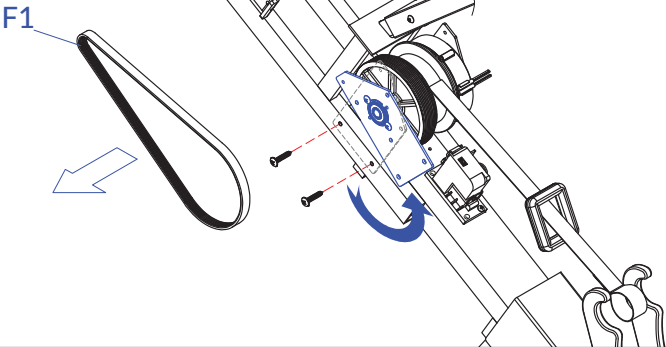


INSTRUCTIONS

- Step 7
Remove sensor

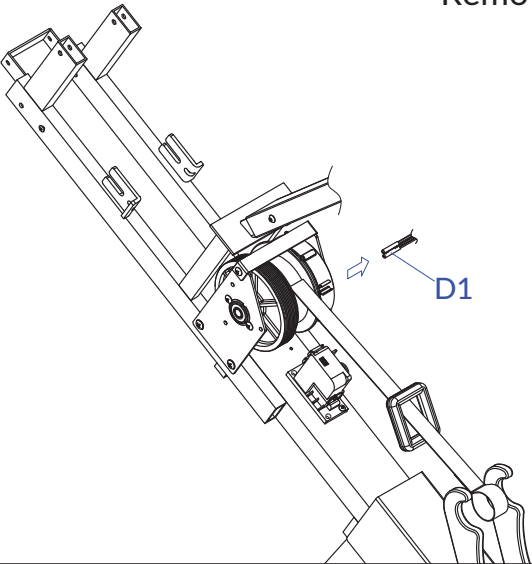


- Step 8
Remove return spring assembly

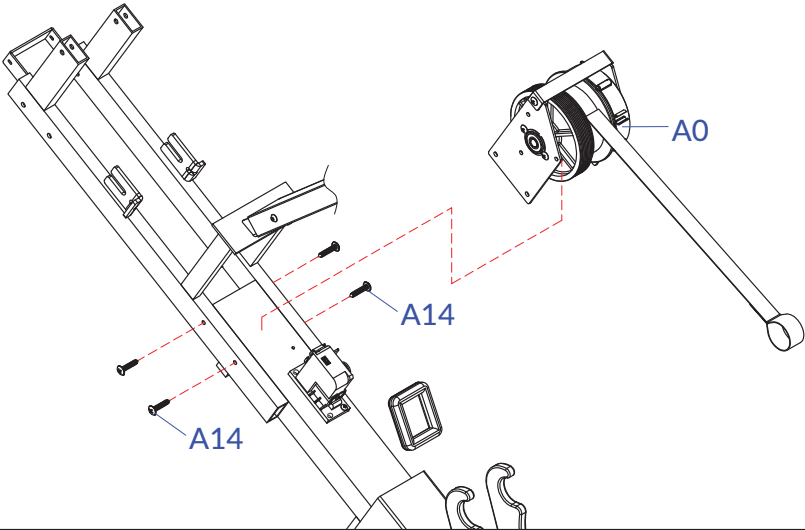


INSTRUCTIONS

● Step 9
Remove motor

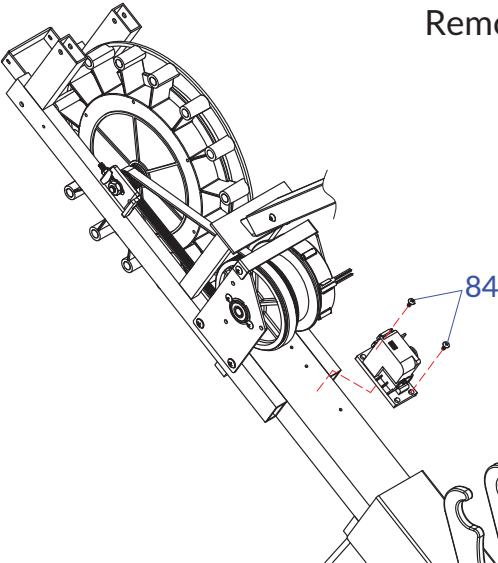


● Step 10
Remove cable

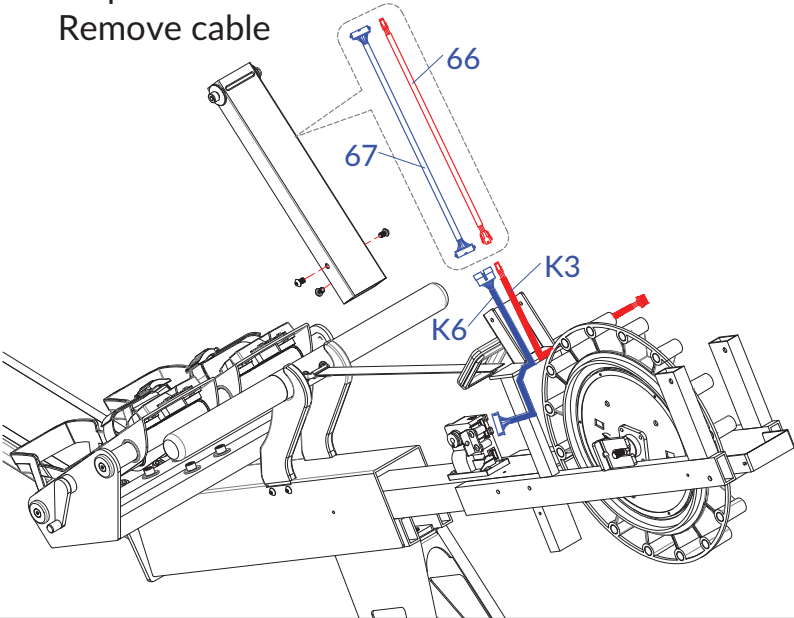


INSTRUCTIONS

- Step 11
Remove saddle base cover

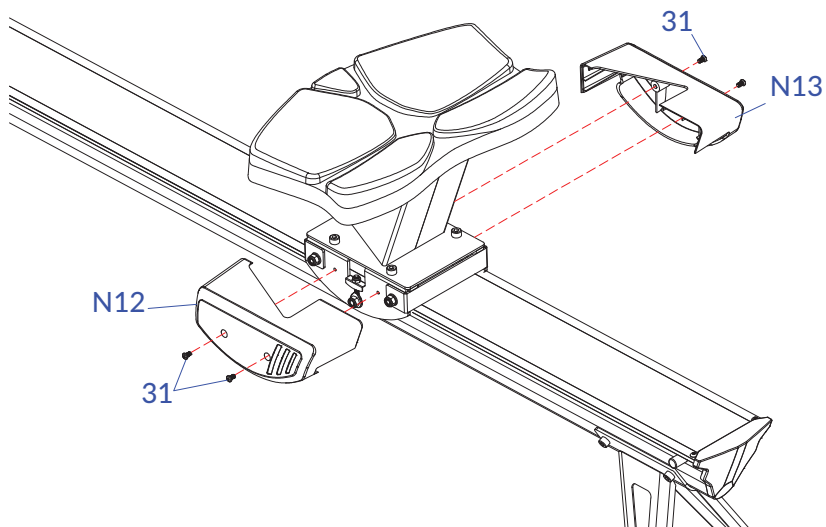

- Step 12
Remove Slider assembly (w/ PU wheel)

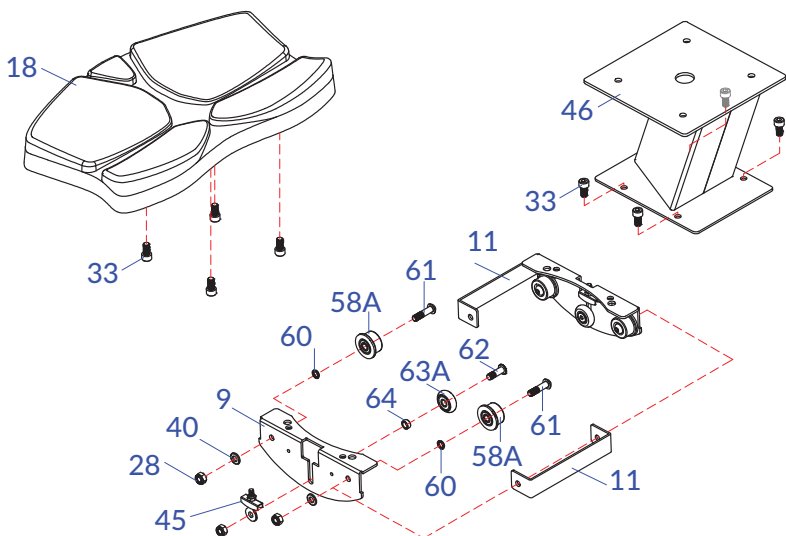



Aviron Interactive Inc.

780 Birchmount Rd. Unit 16
Toronto, Ontario
M1K 5H4, Canada

Phone: 437-317-1199

Email: info@avironactive.com
www.avironactive.com